



INSTALLATION INSTRUCTIONS

6509i | **chroma connect**

RESIDENTIAL SERIES PATHLIGHT

FOR USE ONLY WITH LOW VOLTAGE LANDSCAPE POWER UNITS THAT DO NOT EXCEED 25 AMPS, 15 VOLT MAXIMUM.

WARNING: Luminaires must be installed in accordance with the National Electrical Code (NEC) and local codes. Failure to do so will void the warranty and may result in serious injury and/or damage to the luminaire. Luminaire is UL listed for above grade installation only.

SAFETY WARNING: Luminaire can become very hot depending on lamp wattage used. Lens and metal around lamp can become hot enough to blister hands. Particular care should be taken not to locate luminaires where small children can reach them if high wattage lamps are used.

LUMINAIRES ARE NOT TO BE INSTALLED WITHIN 10 FT. (3.05M) OF A POOL OR SPA. SECONDARY CABLE IS NOT TO BE BURIED MORE THAN 6". WHEN USING MULTIPLE LUMINAIRES, LOAD IS NOT TO EXCEED THE TOTAL WATTS OF TRANSFORMER RATING. DO NOT USE EXTENSION CORDS ON POWER UNITS.

NOTE: Always use UL recognized wire connectors for connections.

NOTE: Save these instructions for future reference.




LUMINAIRE MOUNTING

1. To prevent electrical shock, disconnect transformer from electrical supply before installation or service.
2. Run wire pigtail from luminaire through mounting hole in top of ground stake.
3. Thread luminaire into threaded hole in ground stake.
4. Place stake in desired position and insert into ground until flange of stake is flush to grade.
5. Strip two leads from luminaire pigtail. Using two silicone filled safety connectors (provided), connect leads from luminaire to main supply cable leads.

NOTE: Luminaires are supplied with 36" of 18-2 cable pigtail for secure connection to main supply cable. Wire is to be protected by routing in close proximity to luminaire. Wiring should be buried a maximum depth of 6 inches in order to connect to main supply cable.

6. Provide power to luminaire and check for proper operation.

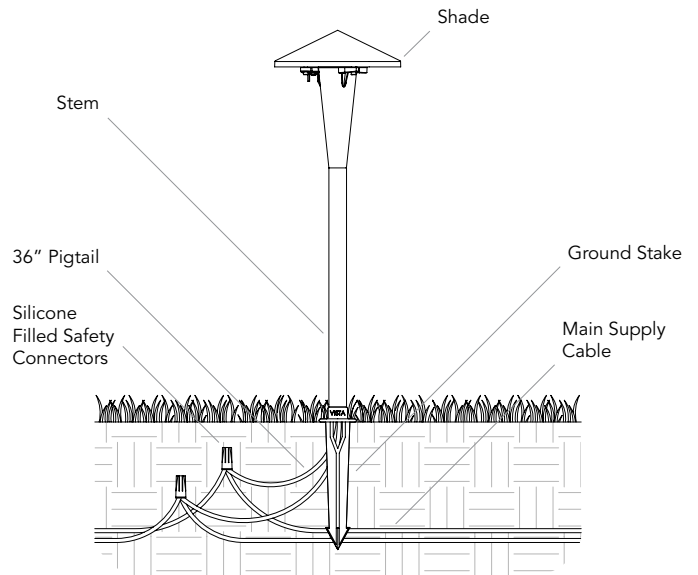

RGBW LED WIRELESS CONTROL




Use your smartphone or tablet device to search and download the free **VistaPro Smart** app from the iOS App Store or Google Play Store.



LED ENGINE INSTALLATION/REPLACEMENT

1. To prevent electrical shock, disconnect transformer from electrical supply before service.
2. Release locking mechanism.
3. Rotate shade to unlocked position.
4. Remove shade and lens assembly to expose LED Module.
5. Loosen mounting screws to release LED Module from fixture base.
6. Remove LED Module from fixture base.
7. Disconnect module connector from base connector.
8. Connect new LED Module to base connector.
9. Reinstall LED Module into fixture base and tighten mounting screws to secure.
10. Reinstall shade and lens assembly and rotate to locked position.
11. Secure locking mechanism.

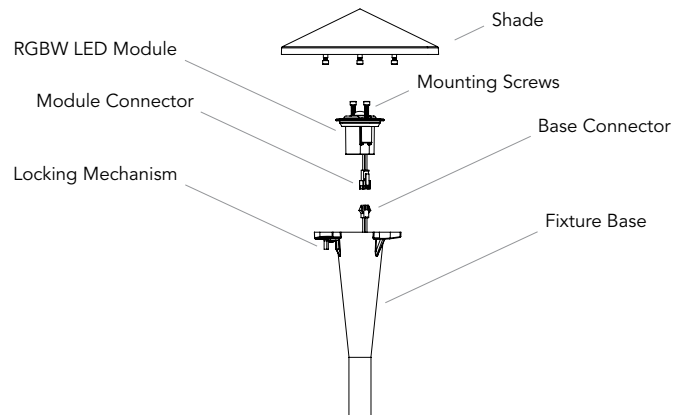

The operating voltage range for this LED luminaire is 9 - 15 volt AC. The Vista electronic driver ensures the LED operates at the intended lumen output while receiving voltage as low as 10.5 volts, and as high as 15 VAC, the U.L. allowed maximum, resulting in a balanced lumen output from the first fixture to the last. Eliminating the dimness issues often attributed to voltage drop.

NOTE: Operating voltage range for LED luminaires will vary depending on model, style and total number of LEDs. To help determine the operating voltage range for each Vista luminaire, always consult factory's specification sheet and/or installation instructions before installation.



**PROFESSIONAL
OUTDOOR LIGHTING**

www.VistaPro.com · email@vistapro.com · Fax: (888) 670-VISTA (8478)

1625 Surveyor Avenue · Simi Valley, CA 93063 · (805) 527-0987 · (800) 766-VISTA (8478)

Vista Professional Outdoor Lighting reserves the right to modify the design and/or construction of the fixture shown without further notification.

Page 1 of 1
REV 07.14.25