


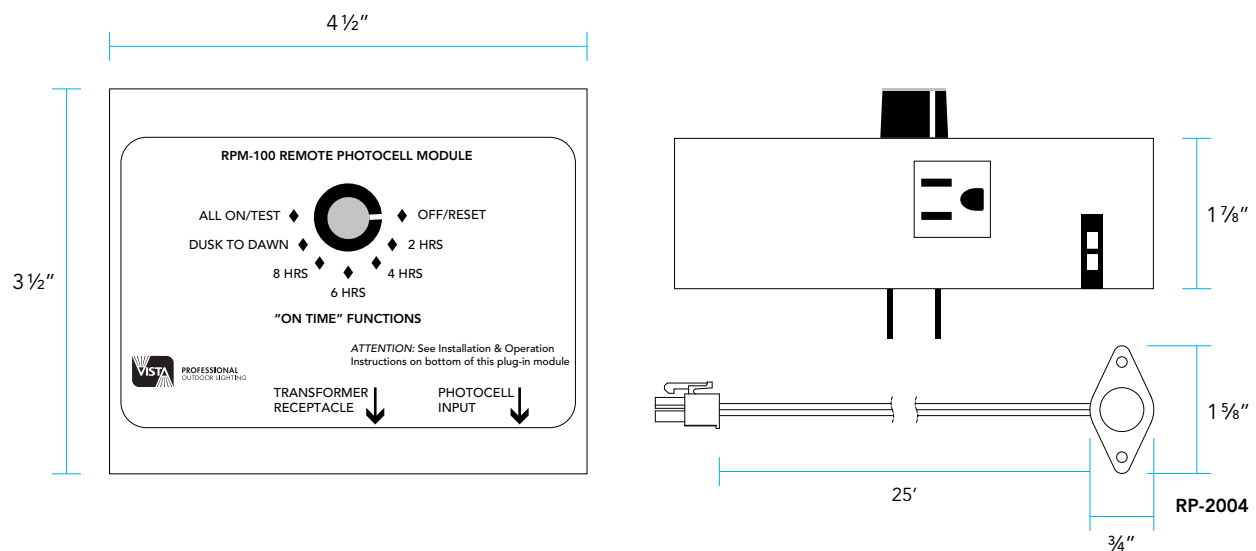

INSTALLATION & OPERATION

1. Disconnect transformer from 120V service. Mount photocell eye where exposed to sunlight.
2. Run photocell cable with white plug back to transformer enclosure.
3. Locate square shaped hole in enclosure bottom and feed plug through to white socket marked "PHOTOCELL INPUT". Plug photocell in.
4. To test in daylight hours, apply input power to transformer and turn photocell control knob to desired setting.
5. Cover photocell eye completely so that no light enters. Transformer should turn on within a few minutes.
6. For normal operation, uncover photocell, turn knob to "OFF/RESET", then to your desired setting.



SERVICEABLE PARTS

RP-2004 – Remote photocell replacement for use with RPM-100

